


10

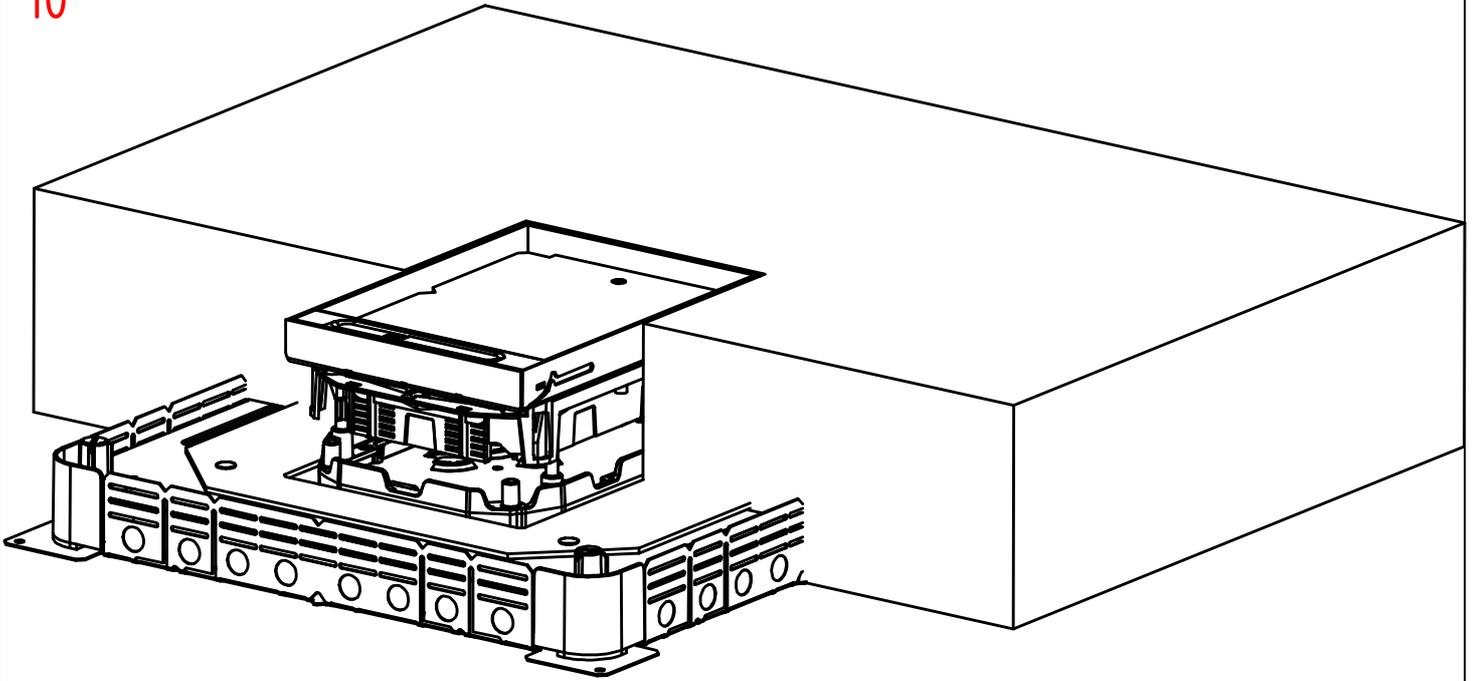

1. Install the support frame into the NEO.
2. Install the VEP2 on the NEOT2.
3. Rule up to the required height ( min 90mm - max 130mm ) using the 4 set screws.
4. Install the VEVV2 without the cardboard structure.
5. Pour the concrete.
6. Cut the VEVV2 up to concrete height.
7. Polish the concrete.
8. Break out the VEP2 and remove the rest of the VEVV2.
9. Fill the gap between the polished concrete and the stainless steel frame with sealant
10. Mount the hinged cover.