


10

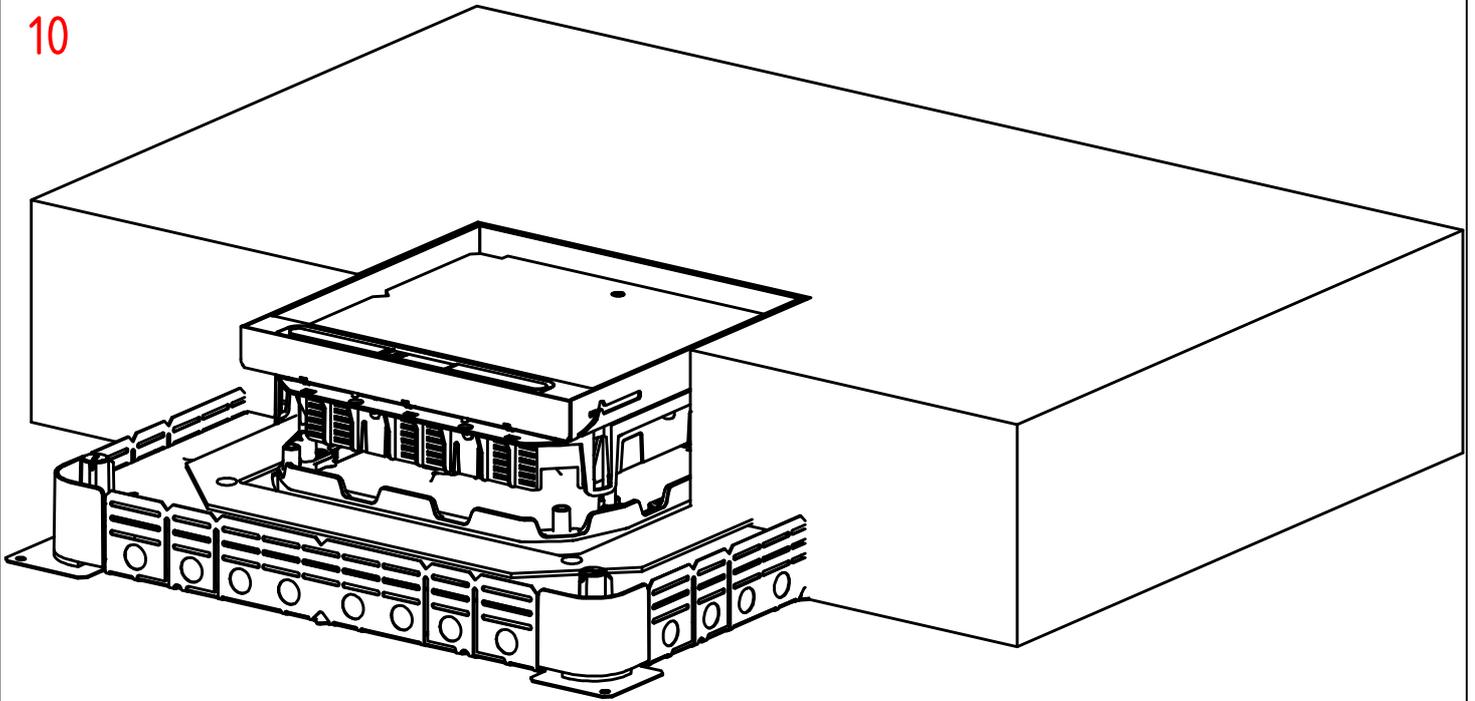

1. Install the support frame into the NEO.
2. Install the VEP3 on the NEOT3.
3. Rule up to the required height (min 90mm - max 130mm) using the 4 set screws.
4. Install the VEVV3 without the cardboard structure.
5. Pour the concrete.
6. Cut the VEVV3 up to concrete height.
7. Polish the concrete.
8. Break out the VEP3 and remove the rest of the VEVV3.
9. Fill the gap between the polished concrete and the stainless steel frame with sealant
10. Mount the hinged cover.