

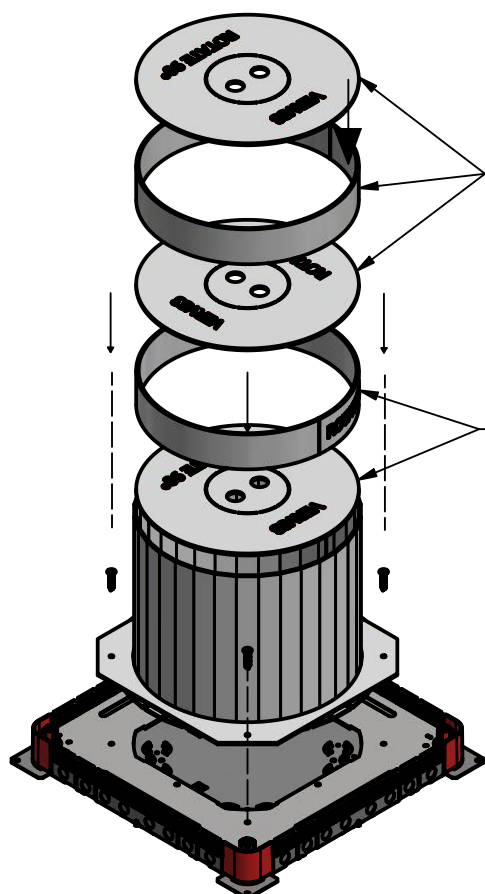
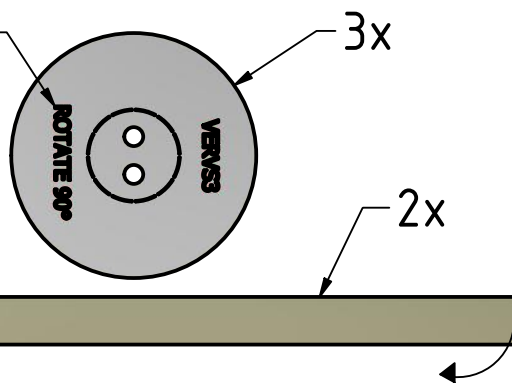


Installation
instruction

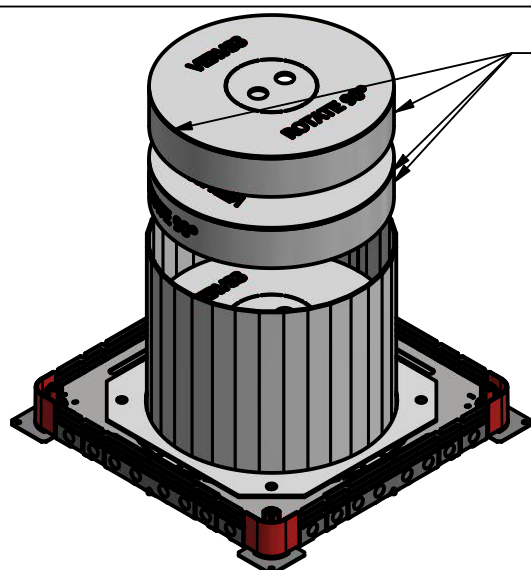


Turn stiffening element 90°
relative to the layer below
Do this for every disk and spacer
Layer 3 & 4 are optional depending
on screed thickness

Free orientation
Press the first disk
down on to the NEO

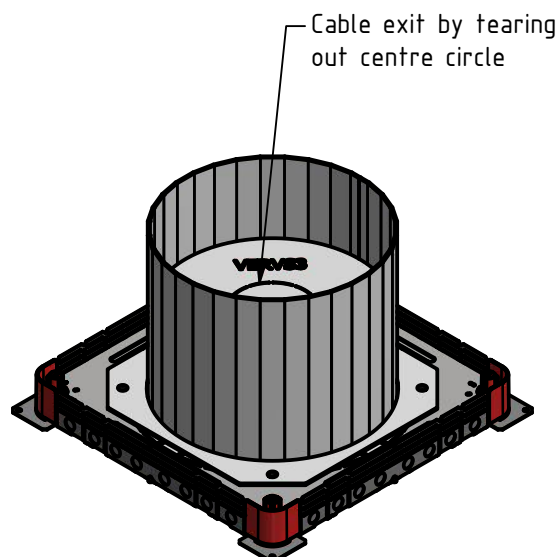

Optional for heigher
concrete thicknesses
>HT+130
article code per layer:
(VERVS3 + VERVT3)
Additional height 65mm

Maximum achievable
standard height
feasible: HT+130

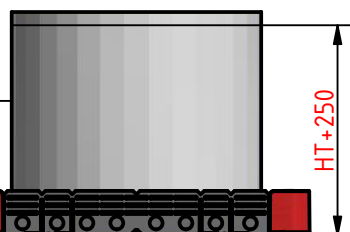

Min screed
height (HS) 75mm

Top plate
height (HT)

HT+250

VERGOKAN

Product Information Manual
VERV3