


# KLWVB

## Valbocht voor KLW

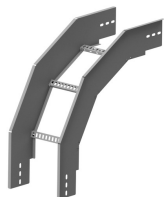

### Te bevestigen met:



Zelfborgende  
flensmoer (DIN  
6923)  
RM

Zelfborgende  
kraagbout (DIN  
603)  
RBK

Radius: 600 mm

| Artikel           | Afwerking | ↕<br>mm | ↔<br>mm | →  ←<br>mm | ↔<br>mm | kg/stk | 📦 | Eenh. |
|-------------------|-----------|---------|---------|------------|---------|--------|---|-------|
| <b>KLWVB200</b>   | SZ        | 200     | 208     |            |         | 7,795  | 1 | STK   |
| <b>KLWVB300</b>   | SZ        | 200     | 308     |            |         | 8,026  | 1 | STK   |
| <b>KLWVB400</b>   | SZ        | 200     | 408     |            |         | 8,256  | 1 | STK   |
| <b>KLWVB500</b>   | SZ        | 200     | 508     |            |         | 8,487  | 1 | STK   |
| <b>KLWVB600</b>   | SZ        | 200     | 608     |            |         | 8,717  | 1 | STK   |
| <b>ZMKLWVB200</b> | DF        | 200     | 208     |            |         | 7,795  | 1 | STK   |
| <b>ZMKLWVB300</b> | DF        | 200     | 308     |            |         | 8,026  | 1 | STK   |
| <b>ZMKLWVB400</b> | DF        | 200     | 408     |            |         | 8,256  | 1 | STK   |
| <b>ZMKLWVB500</b> | DF        | 200     | 508     |            |         | 8,487  | 1 | STK   |
| <b>ZMKLWVB600</b> | DF        | 200     | 608     |            |         | 8,717  | 1 | STK   |

Minimum aantal bouten en moeren: 8 stuks.

### Legende afwerking

- SZ = Sendzimir
- DF = Defender