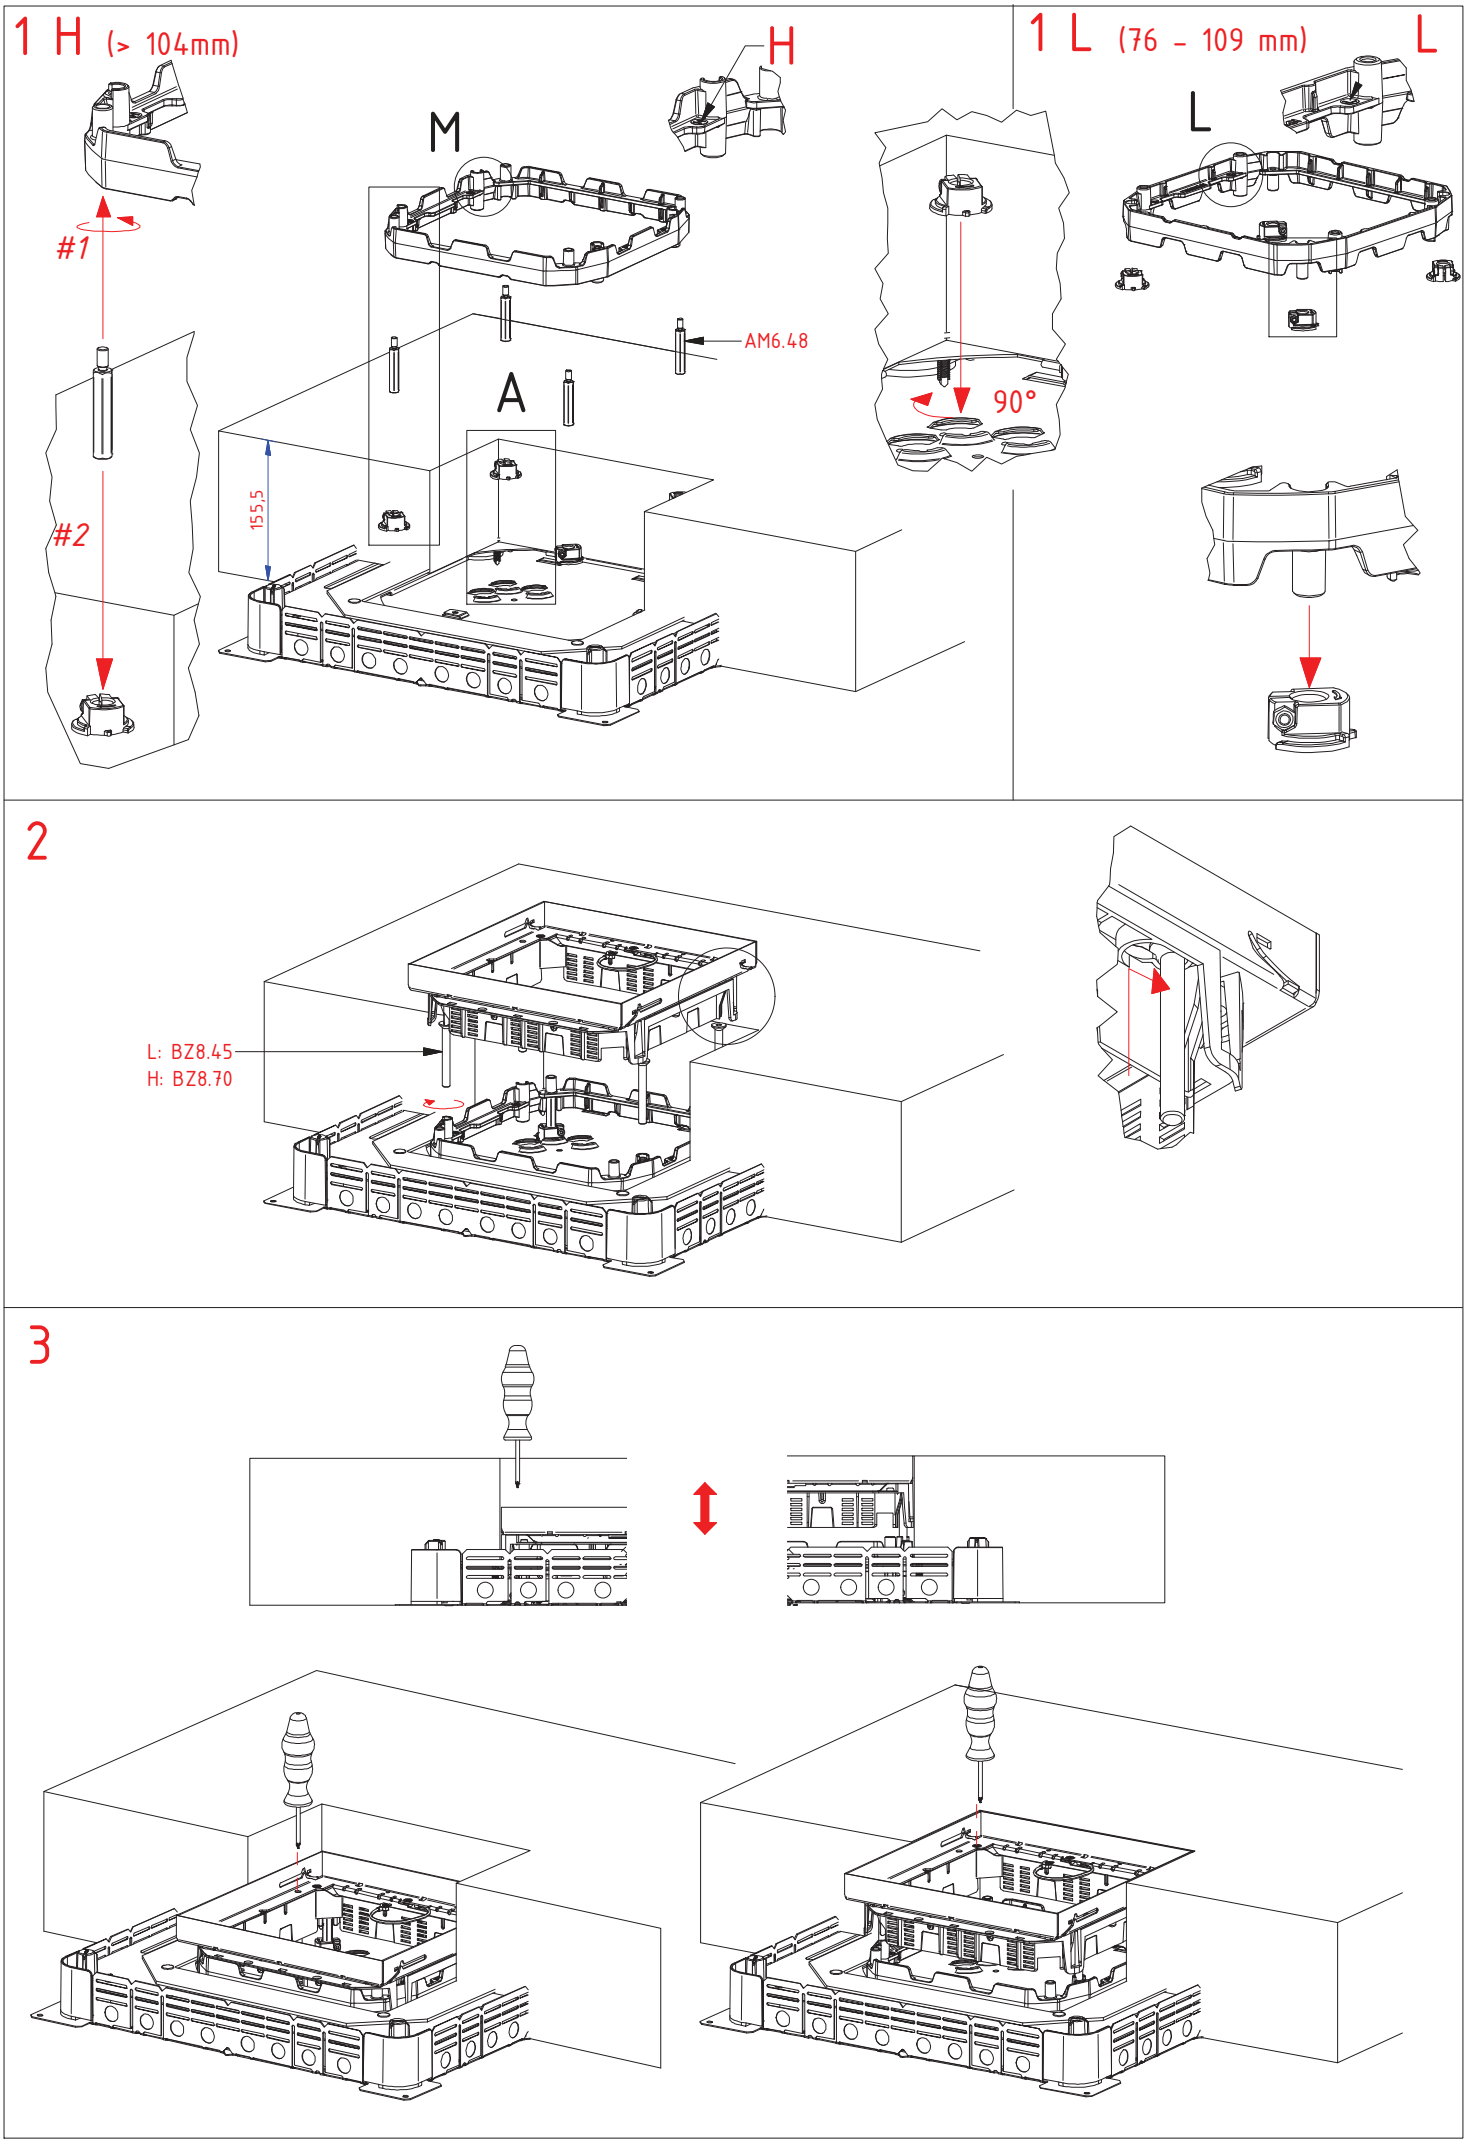
1 H (> 104mm)
H
M
#1
#2
AM6.48
A
155,5
1 L (76 - 109 mm)
L
L
90°
2
L: BZ8.45
H: BZ8.70
3

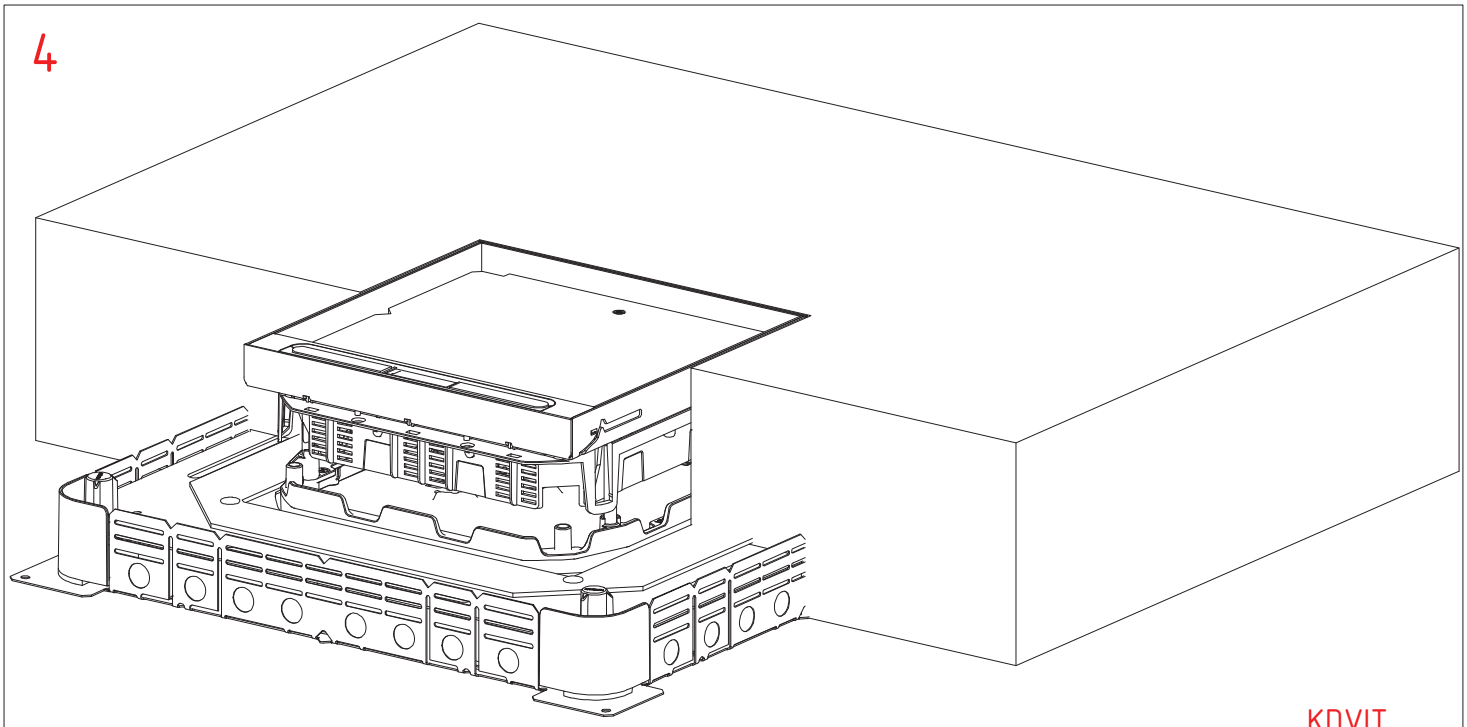

KDVIT

1. Installing the supporting frame
1H: Normal installation (for finished floor level of 104mm and up)
* Make sure the 'H' is visible on top of the supporting frame. If not, turn 180° around horizontal axis
* Insert 4 support feet into the bottom plate of the NEO floorbox and secure them by turning 90°
* Insert 4 inculded distance nuts AM6.48 into the corners (for higher finished floor level, add AM6.48 or AM6.96)
* Insert distance nuts into support feet and secure them by fastening the included bolts of the support feet.
1L: Low installation (for finished floor level of 76 – 109 mm)
* Make sure the 'L' is visible on top of the supporting frame. If not, turn 180° around horizontal axis
* Insert 4 support feet into the bottom plate of the NEO floorbox and secure them by turning 90°
* Insert supporting frame tubes directly into the support feet and secure by fastening included bolts

2: Installation of the stainless steel cover frame.
* Remove cover from cover frame for easier access while installing
* Insert the 4 bolts underneath the cover frame. Secured when clicked
  for finished floor levels up to 109 mm: use included bolts BZ8.45
  for finished floor levels of 104 and up, use included bolts BZ8.70
* Mount cover onto support frame with the 4 installed bolts

3: Levelling the cover to finished floor level.
* Level the supporting frame up to finished floor level by turning the 4 accessible bolts BZ8.45 or BZ8.70
* Secure by fastening the 4 screws next to the bolts

4: Reinstallation of the cover.