1

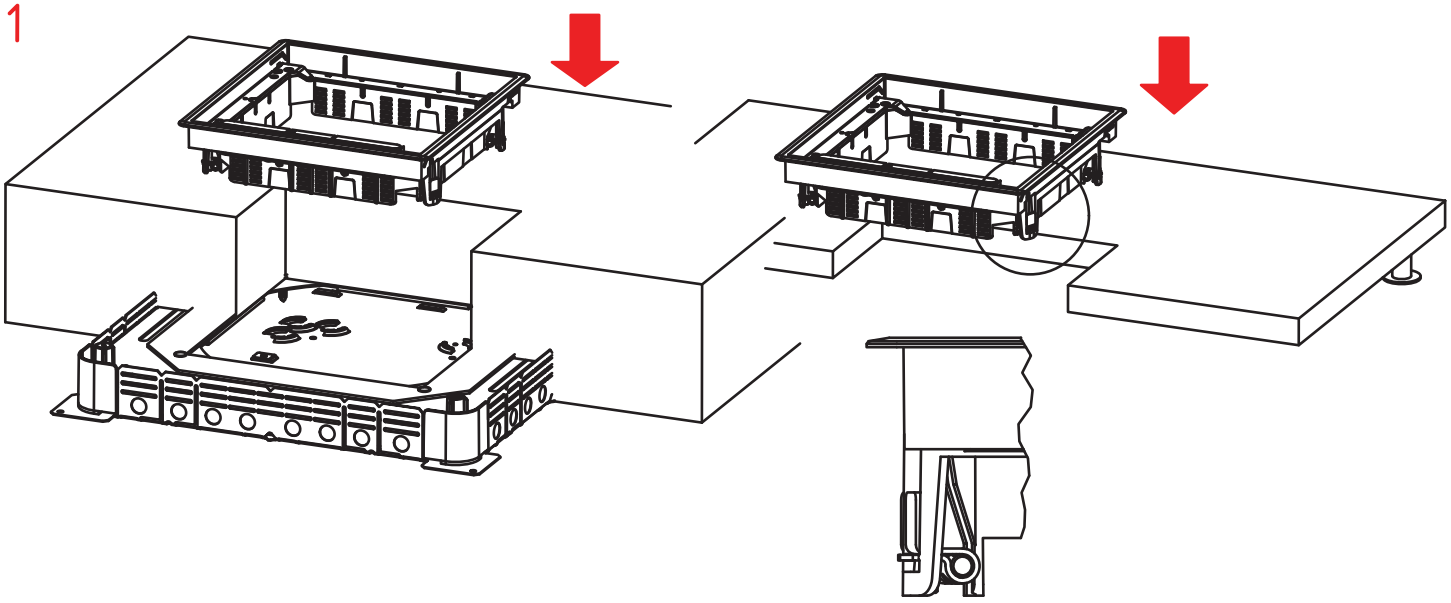

2

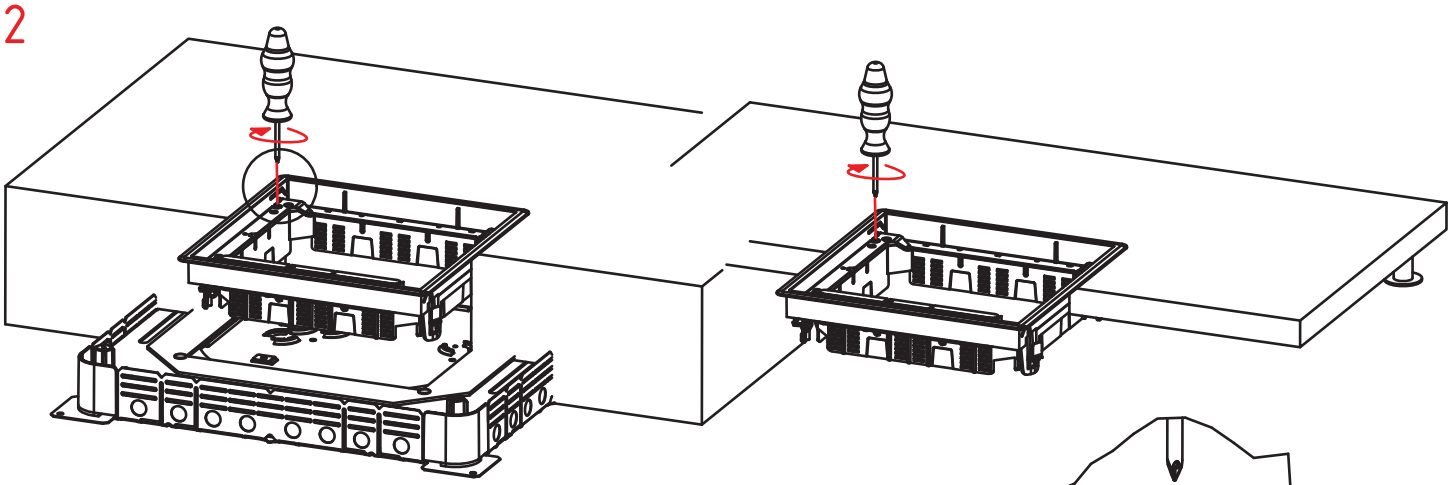

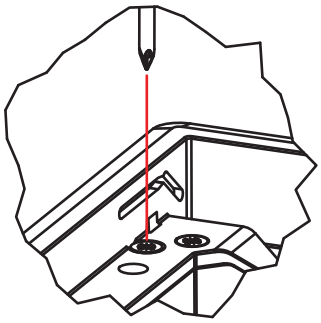

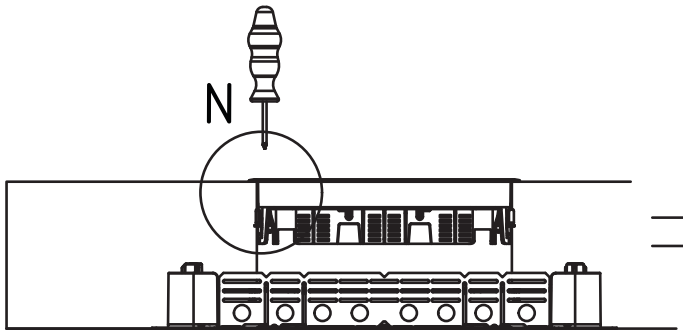

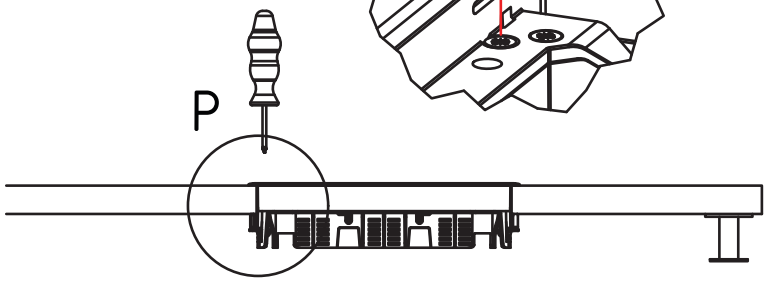

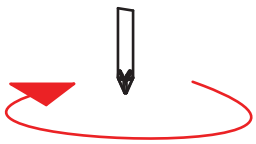



Max. Torque: 0,5Nm

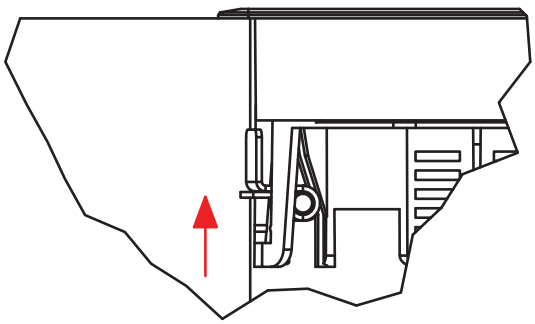

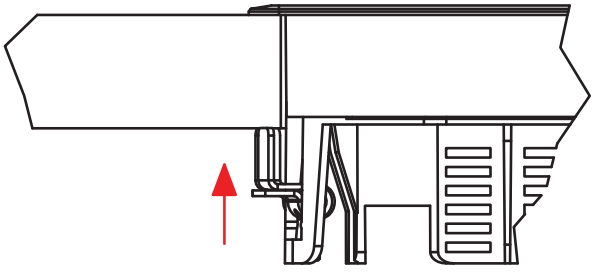

Revision B – 19/02/2019

3

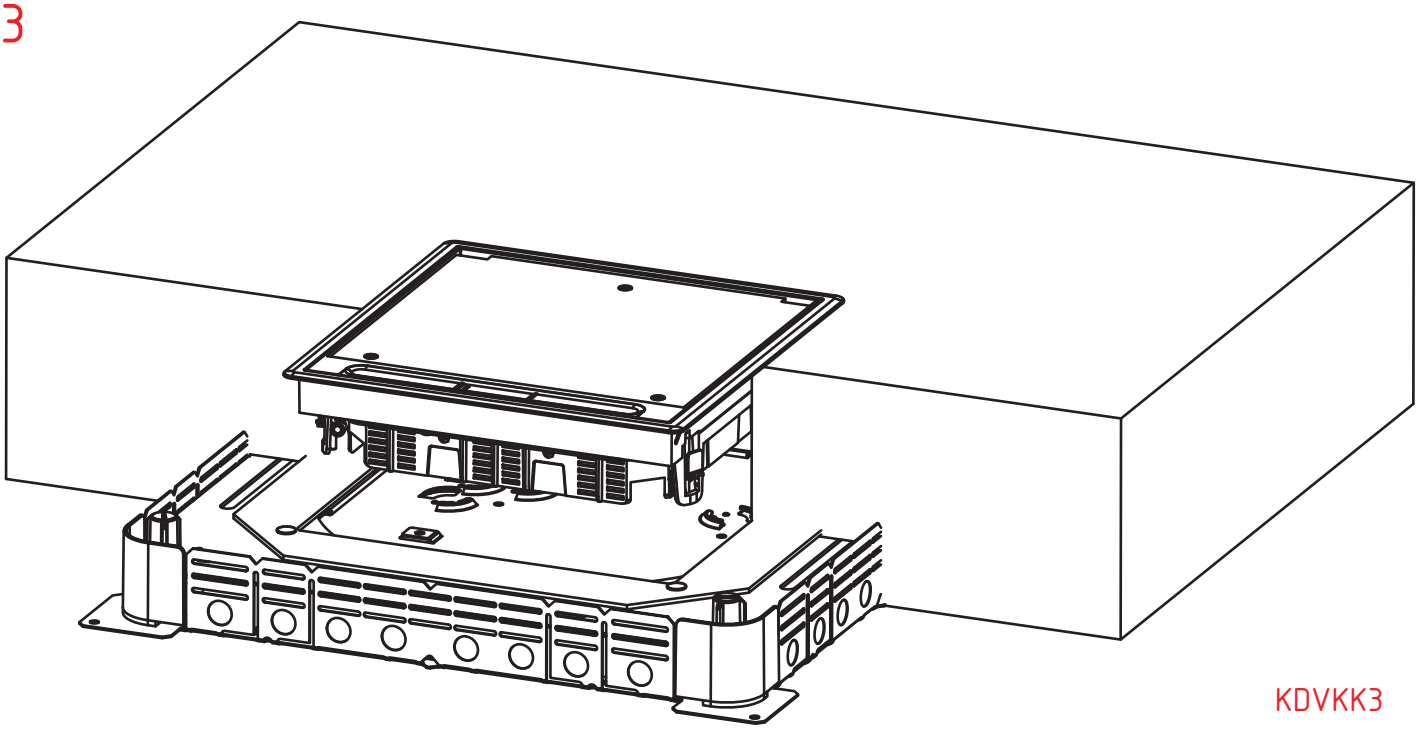

KDVKK3

1: Installation of the frame.
* Make sure that the clamps are at there lowest position.
* Insert the frame into the floor.

2: Fixing the frame in the floor.
* Turn the bolt on each corner of the frame to tighten the clamps onto the floor.

3: Reinstallation of the cover